


MAGNET T SERIES USER GUIDE

1. Product Image

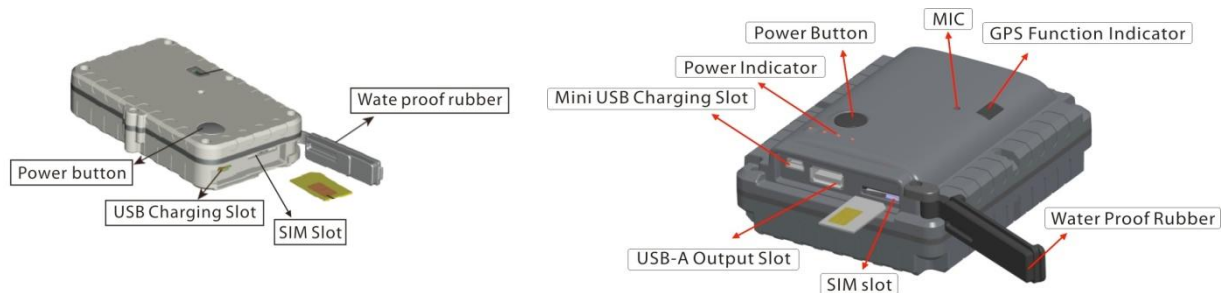

a. T12

b. T4400 /T8800/T15400

Content of the packaging

- a. Tracking device
- b. USB Charging cable
- c. Screwdriver and screws
- d. User Guide

2. Installation Manual

2.1 SIM Card Pre-installation, specification note

- a. GSM Normal SIM Only
- b. SIM card should have its GPRS function enabled.
- d. SMS request will function only if Caller ID function is enabled.

2.2 SIM Card Installations and Removal

- a. Open waterproof rubber
- b. Insert SIM card into the SIM slot, metal face up, clipped corner to the right.
- c. **Green light flashes once and turns to steadily on for 10 seconds, and then turns off.**
- d. Call the device SIM number and it is supposed to get through without answer. (if you are using a data SIM which is not supporting call function, skip this step.)
- e. Ensure the waterproof rubber is closed after SIM installation

2.3 Device Installations

- a. Avoid all metal environment to make sure device is able to receive GSM and GPS signal.
- b. Avoid high temperature environment like above the car engine

3. Button Operation

We strongly recommend you to charge the product before using it the first time. And device will be automatically on once SIM is inserted. Please DO NOT PRESS ANY BUTTON when you use it for the first time.

3.1 Button Operation for GPS function

NOTE: “button” presses must be at 1 second each in all uses

This blue control button is at the bottom of the device

- a. **Power On:** Press control button 5 times. Green light flashes once and turns to steadily on for 10 seconds, and then turns off.
- b. **Power Off:** Press control button 10 times. The blue indicating light will flash for 5 times
- c. **Reset:** Press control button 15 times to reset all settings. The blue indicating light will flash for 3 times. Insert the SIM again and system will be on.
- d. **Charge:** A red light is steadily on during charging and turns off when it is fully charged

3.2 Panic Button


Press and hold the control button for 5 seconds will trigger a SOS alert to registered master number and will be uploaded to the server.



3.3 Button Operation for Power Bank function

This function supports T8800 and T15400 only.

- a. On: Press and hold control button for 2 seconds. 4 Blue indicating lights will show current power status, each light equals approximately 25% of the power capacity available.
- b. Off: Press and hold control button for 2 seconds. Indicating lights will be off.

App User Guide

 Username

 Password 

Register

Login

1. Tracking via website and applications

Tracking Website: www.miitown.com
QR Codes of IOS and Android app are at the bottom of the front page, please scan and download.

Username: Registered Master phone number.
Password: Default as 123456.

2.1 Register an Account

2.1.1 Set APN

APN is Access Point Name. The correct APN must be set to enable the device to send data to the server. Different SIM has different APN, make sure you have confirmed the correct APN information with the SIM provider when you purchase the SIM

The left screenshot shows a mobile app interface with a header bar containing a back arrow and the text 'Register'. Below the header, there are two main sections. The first section is titled 'APN Setting' and contains a message: 'User has to set APN to enable device connect GRPS network for data transfer. Please confirm the correct APN information with the Sim provider'. The second section is titled 'Register Account' and contains a message: 'Register master number. Device will be activated when master registration is done. Please confirm APN correctly set.'.

The right screenshot shows a mobile app interface with a header bar containing a back arrow and the text 'APN Setting'. Below the header, there is a section titled 'Set Phone number in the device' with a text input field and a label 'Country code is required'. Below this, there is a message: 'Some APNs do not require user name and password.' followed by a section titled 'APN' with a text input field. Below this, there is a section titled 'User name' with a text input field. Below this, there is a section titled 'Password' with a text input field. At the bottom, there is a yellow button labeled 'Submit'.

Table underneath is sample of the popular operator data. Please consult the website of your operator to find the APN settings of your SIM.

Operator	APN	Username	Password
KPN (NL)	internet	-	-
Orange (PL)	internet	internet	internet
T-Mobile (US)	internet2.vociestre.am.com	-	-
Vodafone (NZ)	www.vodafone.net.nz	-	-
O2 (DE)	internet	-	-
TIM (IT)	inbox.tim.it	-	-
Mobistar (BE)	web.pro.be	mobistar	mobistar
AirTel (IN)	airtelgprs.com	-	-
Orange (FR)	orange.fr	orange	orange

2.1.2 Registering Account

A. Make sure you put the land code before your phone number and you let out the first 0 of your number.

e.g.: +31612345676 for NL an +32475123456 for Belgium

B. 123456 is the default login password. And it can be changed on the tracking website at **www.miitown.com**

[< Back](#) Register Account

Phone Number in the Device

+Country code Phone number

Master number is the only phone number controls the tracking device via SMS after registration.And it is also the login username of the tracking website and app.

Master Phone Number (Username)

+Country code Phone number

Password

123456

Confirm Password


123456

Submit

3. Control Room

Home

Function list of the app

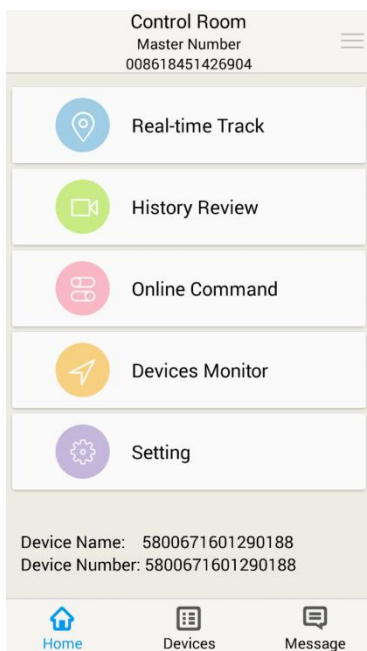


Devices	
<input checked="" type="checkbox"/>	0024601402260074 0024601402260074
<input type="checkbox"/>	0024601402270074 0024601402270074
<input type="checkbox"/>	0024601402270081 0024601402270081

Devices

Show all number devices under the same account. Tap the device's serial number to select the one you need to control.



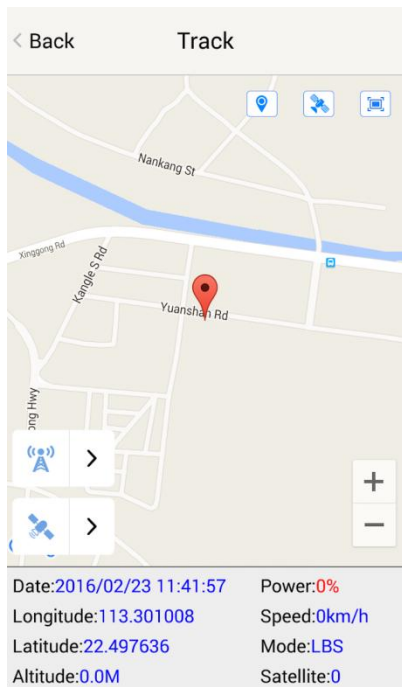

3.1 Real-time Tracking

To get latest location of the device.





Tap to get GSM location



Tap to get GPS location

3.2 History Review

To view the previous location record of the selected device.

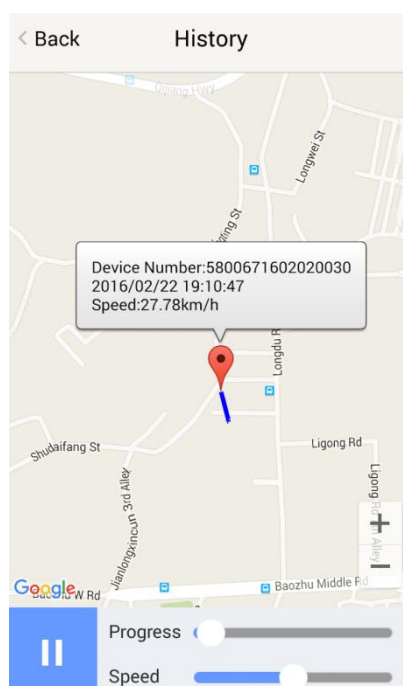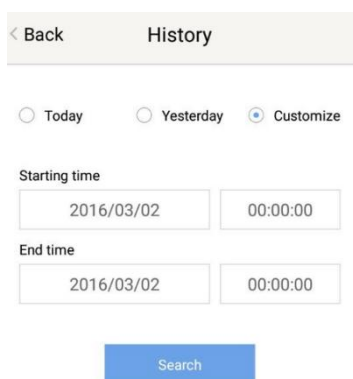

3.3 Online Command

Online Command can control device from APP via SMS, so SMS cost will be charged by the SIM provider of your smartphone, when you send these commands. And all replies from the device will be sent back to app via GPRS data, so replies will be shown as push notification, and all records can be checked in the message section.

< Back	Command
Current Location	
Current GPS Location	>
Current LBS Location	>
Real-time Tracking	
Real-time Tracking	>
Interval Tracking	
Check GPS Location	>
Check LBS Location	>
Motion Sleep	
Motion Sleep	>
Others	

Message
Date:2016/02/22 15:40:10 Alarm Type:Device On SerialNumber:5800671602020030
Date:2016/02/22 15:40:06 Alarm Type:Command Replies SerialNumber:5800671602020030 Message: 1 .GPS is positioning 1 Satellite 2 .Check interval is set to 360 minute(s). 3 .Checkgsm interval is set to 30 minute(s). 4 .Routetrack data is uploading Period is set to 99 5 . Power: 58%
Date:2016/02/22 15:39:52 Alarm Type:Command Replies SerialNumber:5800671602020030 Message: 1 .GPS is positioning 5 Satellite 2 .Check interval is set to 360 minute(s). 3 .Checkgsm interval is set to 30 minute(s). 4 .Routetrack data is unloading Period is set to 99
Home Devices Message

3.3.1 Current GPS Location

To update the latest GPS location of the device. The latest location will be uploaded to website and app map.

3.3.2 Current LBS Location

To update the latest GSM location of the device. The latest location will be uploaded to website and app map.

3.3.3 Real-time Tracking

Enables device to upload 6 locations to server every minute when device is **in motion**.

3.3.4 Check GPS Location

Device will upload GPS location in appointed interval. **No matter device is in motion or not.** Default as 1GPS location uploads every 72 hours.

3.3.5 Check LBS Location

Device will upload GSM location in appointed interval. **No matter device is in motion or not.** Default as 1GSM location every 30 minutes.

Check LBS function is the best power saving tracking function, but distance

inaccuracy could up to 1KM

3.3.6 Deep Sleep

Device will go to deep sleep mode and wake up after appointed interval, and will be stay awake for 12 minutes. If there is no new commands received in 12 minutes, device will go back to deep sleep mode for the next set interval.

The phone function will be off during deep sleep, and no call or SMS can be replied until device wakes up.

3.3.7 Motion Sleep

Device will go to deep sleep mode and wake up when motion is detected, and will be stay awake for 12 minutes.. If there is no new commands received in 12 minutes, device will go back to deep sleep mode until the next motion is detected.

The phone function will be off during deep sleep, and no call or SMS can be replied until device wakes up.

3.3.8 Others

3.3.8.1 Status Query

Check system status, replies will be shown in the message section

3.3.8.2 Device Information

Check software edition information and device's serial number. Replies will be shown in the message section.

3.4 Device Monitor

All devices will be shown in the latest location.

Note:

- 1. Interface of the App you download could be different from the screenshot in the user manual since it is kept updated.**
- 2. Certain functions in the App might not support the model you purchase. Please check the following SMS Command Operating Guide to confirm detail functions list of your tracker.**

SMS Commands Operating Guide

SMS commands are for non-smartphone user, or who would like to control the device through SMS commands only, without using the App.

Please make sure the SIM card you insert in the device support sending SMS function, otherwise you won't be able to receive any command reply

1. Registration

1.1 Set APN

APN is Access Point Name. The correct APN must be set to enable the device to connect network and send data to the server. Different SIMs have different APN, make sure you have confirmed the correct APN information with the SIM provider when you purchase the SIM.

Command

apn* APN's name*username* password

Some APN goes without username and password, you can just leave them blank.

Example: Orange France

APN: orange.fr

Username: orange

Password: orange

**Correct command format *apn*orange.fr*
orange*orange***

Example: China Union

APN : uninet

Username: null

Password: null

Correct command format *apn*uninet*

Your cell phone will receive confirmation saying that the appointed APN is set (See screenshot).

Text Message
Fri, Nov 15, 1:06 PM

*apn*uninet*

Apn is set to uninet.
Username: null. Password:
null.

1.2 Registering the “Master” Controller

- A. Use cellphone to send SMS ***master*123456*+country code plus your cellphone number*** to the device SIM number. 123456 is the default password, it can be changed by changing password command as showed on 1.3.

Example

master*123456*+319876543210 (+31 refers to Netherlands country code, 9876543210 refers to the cell phone number)

- B. Once your cellphone receives the confirmation sms, it will become the only master phone to the tracker (See screenshot).

*master*123456*
+8615382706688*

NOTE: The device will ONLY listen and respond commands from this number unless you choose to turn on the multi controller function and open the device to any cell phone number.

Notice: Cell Phone
+8615382706688 is set to
master controller, the
password is 123456

1.3 Changing the Password

SMS: *password*654321* (654321 refers to new password)

Changing password command has to be sent only from the master number. And new password has to be applied to when you need to register the device with a new master

number.

2. Motion Alert

The motion alert enables device triggered a call/sms alert when motion is detected, **after 3-minutes of non-movement.**

2.1 Set vibration sensitivity

There are 5 levels of the motion sensitivity. 1 being the most sensitive, 5 the least, default setting is 1.

SMS: **sensitive*1-5**

2.2 Set SMS/CALL Alert

There will be a Call/SMS alert sent to master number when any motion is detected, after 3 minutes of non-movement. **The system default setting is call alert, and can be turned off by command.**

SMS: **alertoff**

To turn off motion alert function.

SMS: **smsalert**

To enable motion sms alert function.

SMS: **callalert**

To enable motion call alert function.

3. Tracking via SMS

3.1 SMS: **locateaddress**

Master number will receive the GPS address of the device via SMS. If GPS location is invalid, device will reply the closest cell tower location instead.

3.2 SMS: **locatemap**

Master number will receive a Google map link. Click the link to view the map via cellphone browser. If GPS location is invalid, device will reply the closest cell tower location instead. And this function is suitable for smart phone user only.

4. Tracking via website and applications

Tracking Website: www.miitown.com

ID: Registered Master phone number.

Password: Default as 123456.

It can be changed on the tracking website.

Recommended Web browsers are Chrome, Firefox or cell phone default browser.

4.1 Real-time Tracking (High Power Consumption)

Routetrack function enables device to upload 6 locations to server every minute when device is **in motion**.

4.1.1 Routetrack

SMS: **routetrack*1-99**

1-98 represents the number of hours that the routetrack function works. 99 represents to turn the routetrack function always on.

Example

routetrack*1 means uploading 6 location GPS data every minutes for 1 hour

4.1.1.1 Rsampling

Rsampling is to set routetrack data collecting interval.

The smaller interval, the higher accuracy, but the higher power consumption.

SMS **rsampling*1-999**

1-999 represents seconds of data collecting interval, default as 10 seconds

4.1.1.2 Rupload

Rupload is to set routetrack data upload interval.

The smaller interval, the higher accuracy, but the higher power consumption.

SMS **rupload*1-999**

60-999 represents seconds of data uploading interval, default as 60 seconds, **minimum rate should not be less than 60**

Example

rsampling*30 plus **rupload*120** means 4 location data will be uploaded to server every 2 minutes when routetrack function is on.

SMS: **routetrackoff**

To turn off route track function.

4.2 Check GPS Location (Medium Power Consumption)

Check function enables device to upload GPS location in an appointed interval, **no matter device is in motion or not in motion**. If GPS location is invalid, system will upload the closest cell tower location instead.

SMS: **checkm*5-9999**

5-9999 represents the number of minutes that the device Check's data upload interval, **minimum rate should not be less than 5**.

Example

checkm*360 means uploading GPS data every 6 hours.

Note:

1. Check function is able to work with routetrack and Checkgsm functions at the same time.
2. System is default as **checkm*4320**. 1 location will be uploaded to server every 72 hours.
3. **Location will be uploaded to server when device is in motion or not in motion.**

4.3 Check GSM Location (Low Power Consumption)

Checkgsm function enables device to upload ONLY the GSM location in appointed interval of time. Data will be uploaded to server on both occasions, no matter device is **in motion or not in motion**.

And this function can be used with routetrack and Check function at the same time.

SMS: *checkgsm*5-1800*

5-1800 represents the the number of minutes of Checkgsm's data upload interval, **default as off**; rate should not be less than 5.

Example

*checkgsm*30* means uploading GSM data every 30 minutes.

4.4 Track Off

Track off will end all the tracking functions, including routetrack, checkm, checkgsm, timing locate and period locate.

SMS: *trackoff*

5 Upload Alert

The upload alert function enables device upload alert status to the server including **motion alert, low battery alert** etc. User can check alert status on the tracking website or message section in app.

This function is default as ON.

SMS: *uploadalert*on*

To enabled upload alert function.

SMS: *uploadalert*off*

To disable upload alert function.

6. Sleep Function (Lowest Power Consumption)

6.1 Interval Sleep

Device will go to deep sleep mode and wake up after appointed interval, and stay awake for 12 mintues. If there is no new commands received in 12 minutes, device will go back to deep sleep mode for the next set interval.

Note: System will shut down GPS and GSM module during deep sleep period, so no call or SMS can be received or responded.

SMS: *sleep*1-99*

1-99 refers to the hours of appointed sleep interval.

Example

*sleep*6* means to enable device to go to deep sleep mode and wake up in every 6 hours.

6.2 Motion Sleep

Motion Sleep function enables device to stay in deep sleep mode and wakes up once motion is detected. System will upload the current location of the device. If motion continues, system will stay on and operate the previous tracking settings. If

there is no further motion detected, device will go back to deep sleep in 12 minutes. And the circle repeats.

Note: System will shut down GPS and GSM module during deep sleep period, so no call or SMS can be received or responded.

SMS: *sleepv*

To enable motion sleep function.

SMS: *sleepoff*

To turn off motion sleep and interval sleep function.

7. Remote Listening

Remote listening function suitable for models support mic only. Please check your models number in Hardware Specification to confirm.

It enables master number to call-in and listen to the environmental sound of the device, and device also able to call back when receiving the callback command from master number.

7.1 SMS: *callin*

Master number is able to call the device phone number and start listening within 30 minutes after the command is sent

7.2 SMS: *callback*

The device will call the master number when command is received.

8. Status query

SMS: *status*

To check device setting status and performance. GPS ranking data will shows up only when routetrack function is on.

9. Low battery Alert

Low battery alert function suitable for models with backup battery only. Please check your models number in Hardware Specification to confirm.

There will be a low battery SMS alert sent to master number when battery drops to 20% of it's capacity, and the routetrack function will be turned off for power saving. And it will resume working when battery is charged. The alert number can be appointed to any other cellphone number if needed.

Appoint low battery alert number

SMS: *lowbat*alert cellphone number*

Note: Please make sure country code is included in the cellphone number.

Example

lowbat+319876543210*

10. SOS Alert

SOS Alert function enables device to send SOS alert to preset number when the panic button is triggered.

Up to 3 SOS numbers can be preset.

The registered master number is the default SOS alert number.

10.1 Register the SOS alert number

SMS: *master*123456*cellphone number 1*cellphone number 2*cellphone number 3*

NOTE: Please make sure country code is included in the cellphone number.

10.2 Panic Button

Power button is the panic button. If there is a SIM card inserted, press and hold the button for 5 seconds to trigger SOS alert. Preset numbers will receive the following SOS SMS "SOS! HELP! SOS!! HELP!! SOS!!! HELP!!!" **System default as off.**

SMS: *soston*

To enable SOS alert function.

SMS: *sosoff*

To turn off SOS alert function.

11. Reboot

SMS: 88888888

Reboot system, previous settings will not be cleared.

12. Master query

SMS: 999999

To check registered master number, password and device's serial number.

13. Default

SMS: default

To operate factory default, previous settings will be cleared.

14. Multi Controller

Allows any cellphone number to check the device location and status besides the master number.

14. 1 SMS: *multiquery*

To enable multi controller function.

14. 2 SMS: *multiqueryoff*

To turn off the multi controller function.

15. Device Information

SMS: *about*

To check device information including software edition and serial number.

Command Setting List

Function	Command	Description
APN Settings	*apn*APN's name *username*password*	Enable device to access internet.
Master Setting	*master*123456*country code (plus) cellphone number*	Register master number.
Password Changing	*password*654321*	Original password is default as 123456. 654321 refers to new password.
Vibration Sensitivity	*sensitive*1-5*	Set motion alert sensitivity, 1 is the most sensitive, 5 is the least
Motion Alert	*alertoff*	End motion alert
	smsalert	Motion alert via SMS
	callalert	Motion alert via Call
Address Query	*locateaddress*	Address information of current location.
Google Map Search	*locatemap*	Google Map link with current location.
Real-time Tracking	*routetrack*1-99*	Device will upload 6 locations every minute. 1-98 represents routetrack data upload interval in hours. 99 represents always on.
Real-time Tracking sampling interval	*rsampling*1-999*	1-999 represents seconds of routetrack sampling interval
Real-time Tracking upload interval	*rupload*1-999*	1-999 represents seconds of routetrack upload interval











Function	Command	Description
Real-time Tracking Off	*routetrackoff*	End routetrack function.
Check Location	*checkm*5-1800*	5-1800 represents minutes of check function data upload interval
	checkoff	End check function
	*checkgsm*5-9999*	5-9999 represents minutes of check gsm function data upload interval
Track Off	*trackoff*	End all the tracking functions.
Upload Alert	*uploadalert*on*	Enable upload alert function
	*uploadalert*off*	End upload alert function
Interval Sleep	* sleep*1-99*	1-99 represents device wake up interval in hours.
Motion Sleep	* sleepv*	Motion Sleep function with motion alert.
Sleep Off	*sleepoff*	End Interval sleep and motion sleep function.
Status query	*status*	Check system status.
Multi Controller	*multiquery*	Enable multi controller function.
	multiqueryoff	End multi controller function.
Remote Listening For models support mic	*callin*	Enable call-in listening function for 30 minutes
	callback	Enable call back listening function

Function	Command	Description
SOS Alert	*soston*	Enable SOS alert function.
	sosoff	Disable SOS alert function.
Device Information	*about*	Software edition information and device's serial number.
Reboot	88888888	Reboot the system, previous settings will NOT be cleared.
Master Query	999999	Registered master number information, password and device's serial number.
Low Battery Alert Number	*lowbat*country code (plus) cellphone number*	To set low battery alert number.
Factory Default	default	Default system, previous settings will be cleared.

Hardware Specification

T SERIES MODEL AND FUNCTION LIST				
Model	Size	Back up Battery	Remote Listening	Power Bank
T12	102mmx63mmx21mm	2600mAh	N	N
T4400	108mmx56mmx40mm	5200mAh	Y	N
T8800	110mmx88mmx40mm	10400mAh	Y	Y

T15400		20800mAh	Y	Y
	165mmx88mmx42mm			

-  GPRS:MTK 6260D/6261
-  Quad band; GSM 850/900/1800/1900 MHzAntennae: Internal, GPRS Class 12
-  Power: Rechargeable, Lithium-ion Battery
-  Built-in Vibration/motion sensor
-  GPS: U-BLOX G7020-ST, 50 channel
-  Antennae: Internal
-  Position Accuracy: >=5m
-  Sensitivity: Tracking: (R)C161 dB, Cold starts: (R)C148 dB, Hot starts: (R)C156 dB
-  Cold start:<27s, Warm Start: <5s, Hot Start: 1s
-  A-GPS: AssistNow Online and AssistNow Offline services.